

## Models:

- FLEXmax 80: 80 amps maximum continuous output current (up to 40°C without thermal derating)
- FLEXmax 60: 60 amps maximum continuous output current (up to 40°C without thermal derating)

## Features:

- Maximum Power Point Tracking
- Supports 12, 24, 36, 48, and 60 Vdc battery voltages
- Backlit display screen (LCD) with 80 characters (4 lines, 20 characters per line)
- Last 128 days of operational data logging
- Voltage step-down capability allowing a higher PV array voltage configuration
- Manual and automatic equalize cycles


## Screen Versions:

- English
- Spanish
- Australian (English with different default settings)

## Maximum PV Input Wattage per Charge Controller

Battery Bank Voltage	Maximum PV Input Wattage for the FLEXmax 80	Maximum PV Input Wattage for the FLEXmax 60
12 Vdc	1000 W	750 W
24 Vdc	2000 W	1500 W
36 Vdc	3000 W	2250 W
48 Vdc	4000 W	3000 W
60 Vdc	5000 W	3750 W

## FLEXmax Charge Controller

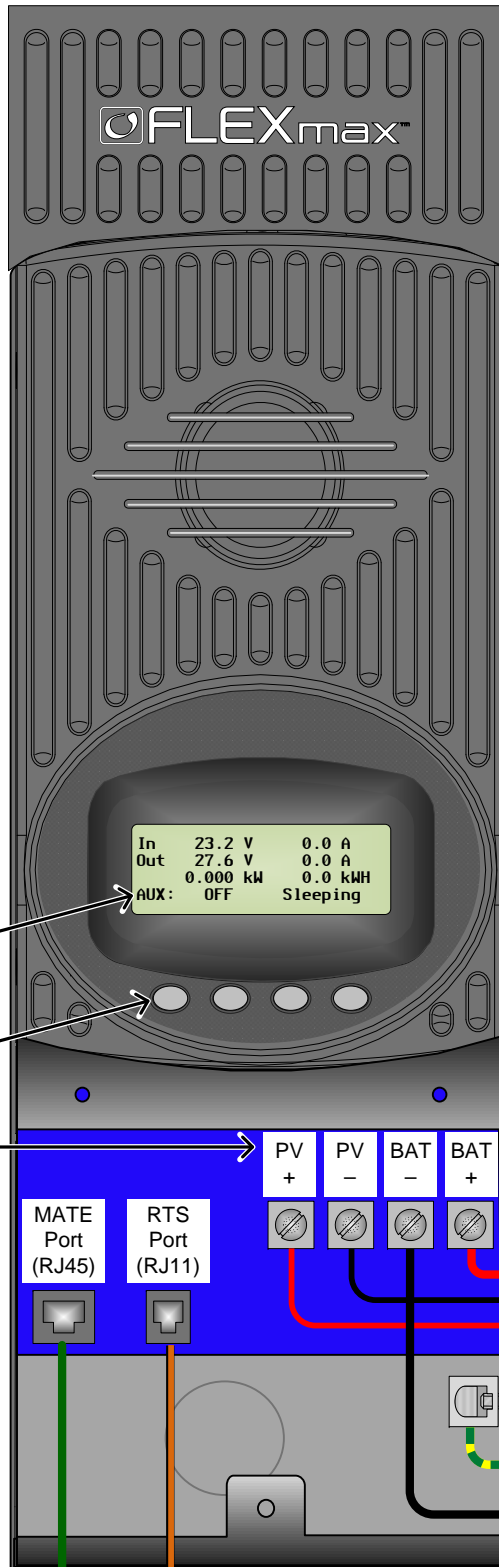


LCD Screen

Soft Keys






Terminals

System Display and Controller (MATE3)

**IMPORTANT: Example only.** Actual wiring may vary. All configurations must comply with local and national electric codes. Consult your local electric authority to ensure compliance.

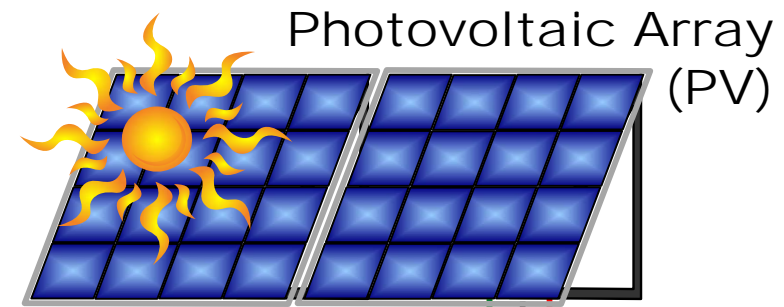


PV Combiner Box

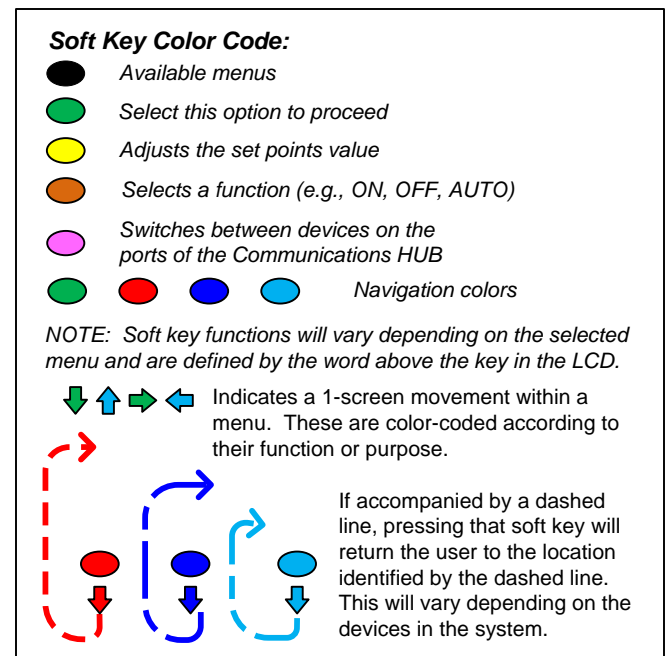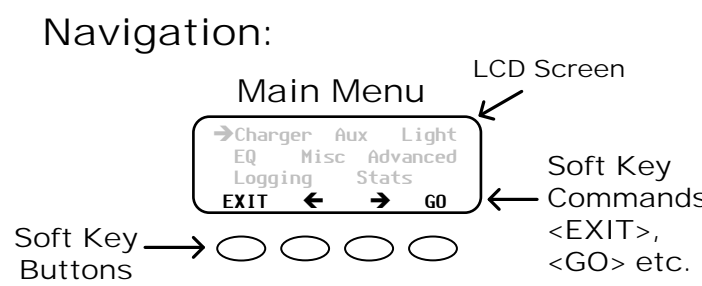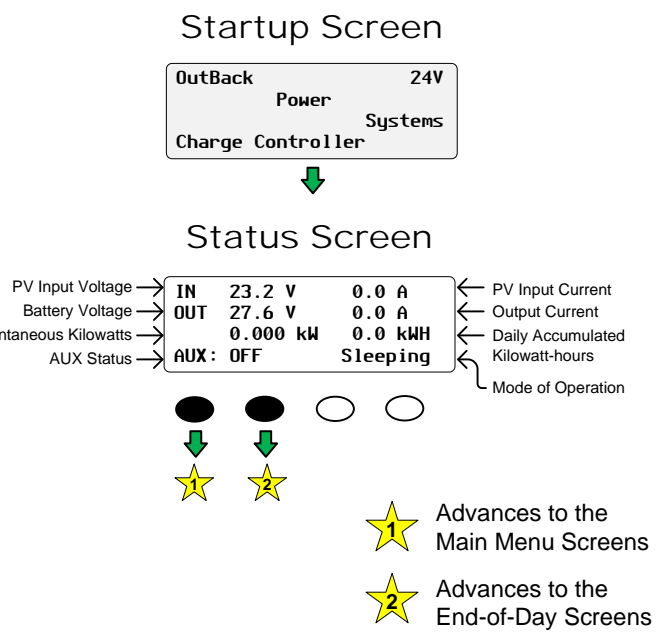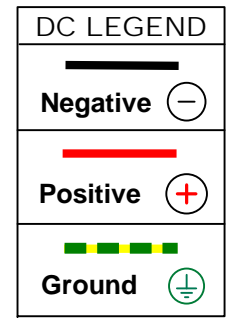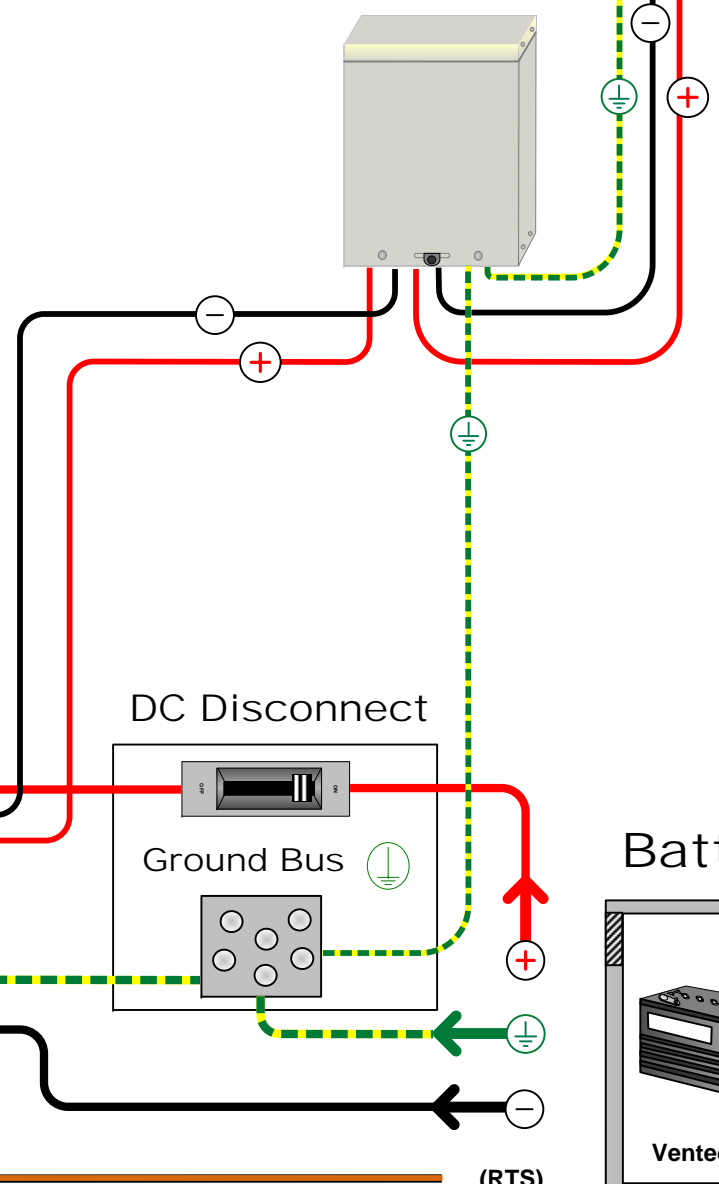

NOTE: See the FLEXmax Series Owner's Manual for details on the settings available in the main menu.


## To change the Language, Screen Version or System Voltage:

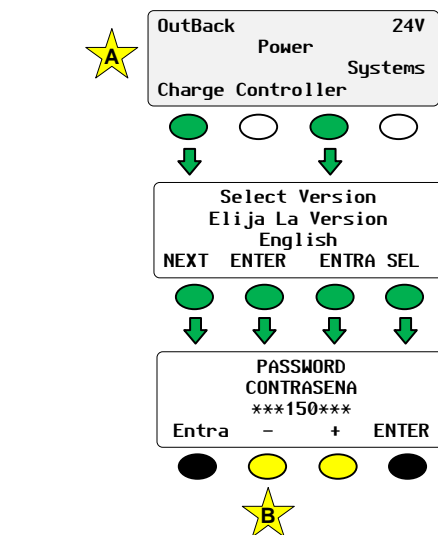


**IMPORTANT:**  
To access the screens to change the language or system voltage, press and hold the 1<sup>st</sup> and 3<sup>rd</sup> soft key at the same time, THEN CLOSE THE DC BREAKERS.

**NOTE:** Changing these setting will revert all other settings back to the factory defaults. Any customized settings will be lost. See the *FLEXmax Series Charge Controller Owner's Manual* for details.



- B** 1. Press the <-> soft key until "141" is displayed on the LCD.
- C** 2. Press the <ENTER> or <ENTRA> soft key to accept the password and move forward to the Select Version Screen.

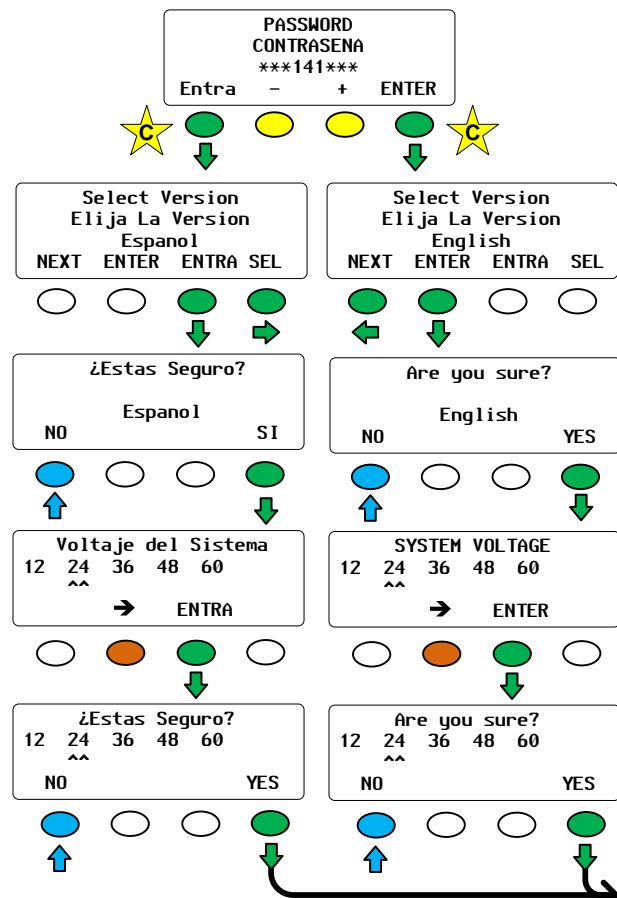

The Spanish Status Screen is not shown in this illustration. It is available in the Spanish translation of this document.


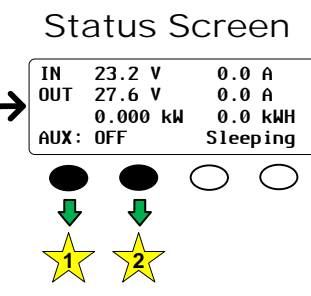


## To access the Main Menu:

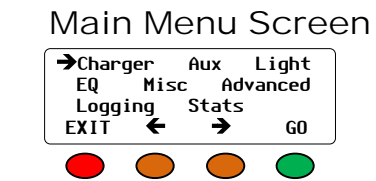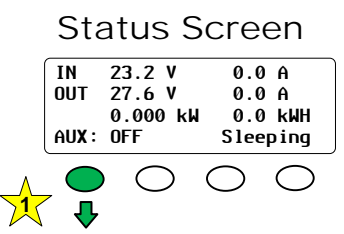


To select a menu from the Main Menu, press the <←> or the <→> soft key to move the cursor (→). When the → is next to the desired menu, press <GO>.

- **Charger**—CHARGER SETUP  
Adjusts the Current Limit, Absorbing, and Float recharging voltage set points
- **Aux**—AUX OUTPUT CONTROL  
Secondary control circuit for a vent fan, AGS, error alarm, and other system-related additions
- **Light**—BACKLIGHT CONTROL  
Adjusts the backlighting of LCD screen and soft key buttons
- **EQ**—BATTERY EQUALIZE  
Activates battery equalization (manually or automatically)
- **Misc**—MISCELLANEOUS  
Additional settings and service information
- **Advanced**—ADVANCED MENU  
Optimizes/fine-tunes the charge controller
- **Logging**—DATA LOGGING  
Displays recorded power production information
- **STATS**—STATISTICS  
Displays recorded peak system information and cumulative kilowatt-hours and amp-hours

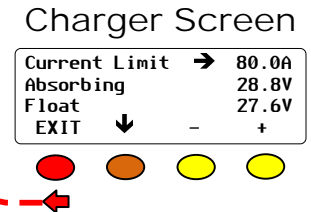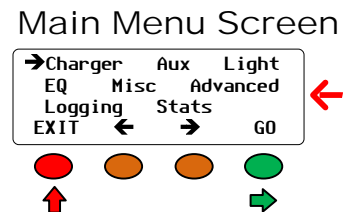

Press <↓> to move the → next to the desired setting.  
Press <-> or <+> to adjust the setting.  
Press <EXIT> to return to the main menu.

## End-of-Day (EOD) Summary Screens

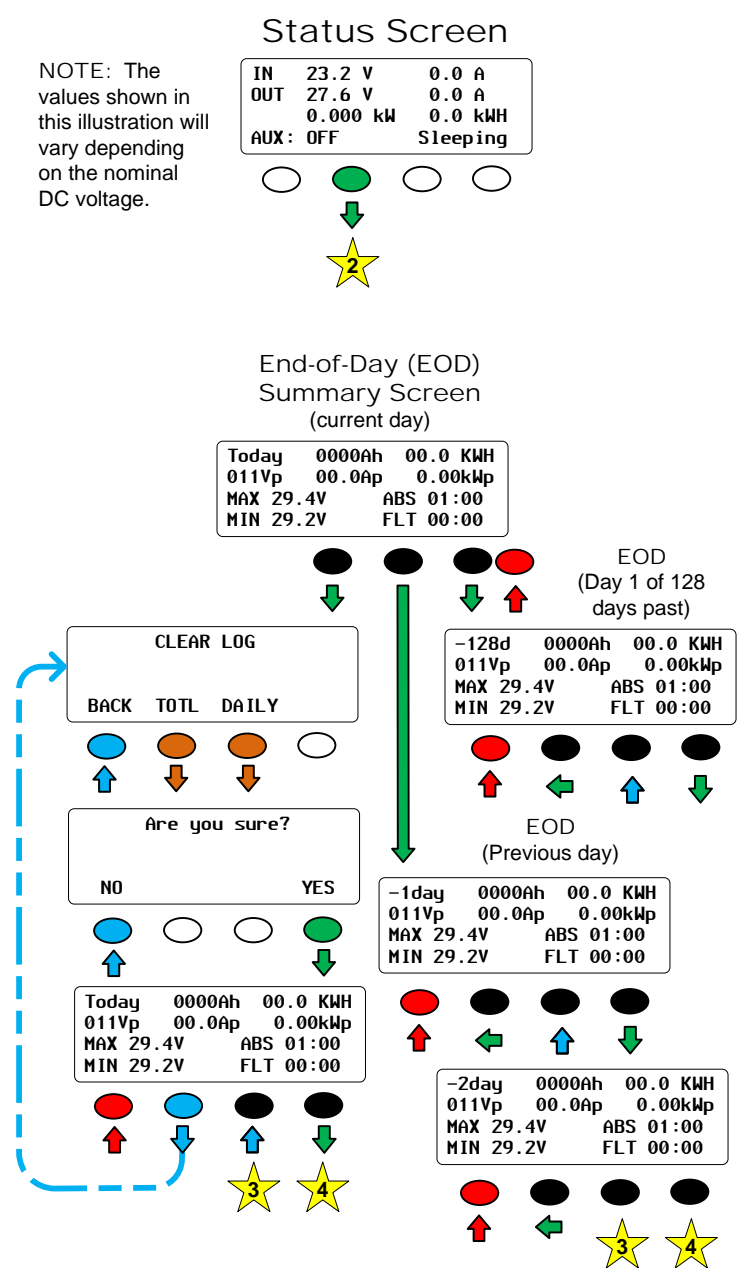

**NOTE:** The values shown in this illustration will vary depending on the nominal DC voltage.

**3** Continuing to press this soft key will cycle backwards by 1 day up to 128 days.  
Press and hold this soft key to automatically scroll backwards through the available days.

**4** Continuing to press this soft key will cycle forward by 1 day up to 128 days.  
Press and hold this soft key to automatically scroll forward through the available days.